

# Toyota Maintenance Schedule

Maintenance Items	Kilometres x 1,000	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	Months	-	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
<b>Chassis and body</b>																						
<input type="checkbox"/> Clutch pedal .....	I	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
<input type="checkbox"/> Brake pedal and parking brake .....	I	-	-	-	I	-	-	-	I	-	-	-	I	-	-	-	I	-	-	-	-	I
<input type="checkbox"/> Parking brake linings and drums .....	-	-	(I)	-	(I)	-	(I)	-	I	-	(I)	-	(I)	-	(I)	-	I	-	(I)	-	(I)	(I)
<input type="checkbox"/> Brake pads and discs .....	-	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)
<input type="checkbox"/> Brake fluid .....	I	-	I	-	I	-	I	-	R	-	I	-	I	-	I	-	R	-	I	-	I	I
<input type="checkbox"/> Clutch fluid .....	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	I
<input type="checkbox"/> Brake pipes and hoses .....	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	I
<input type="checkbox"/> Power steering fluid .....	-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	I
<input type="checkbox"/> Steering wheel, linkage and steering gearbox oil .....	-	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	I
<input type="checkbox"/> Steering knuckle, drag link and steering linkage (FZJ7#/105, HZJ# models) .....	-	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
<input type="checkbox"/> Propeller shaft <sup>5</sup> .....	-	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)	L	(L)
<input type="checkbox"/> Propeller shaft bolts .....	-	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)	T	(T)
<input type="checkbox"/> Drive shaft boots (UZJ100 models) .....	-	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)	I	(I)
<input type="checkbox"/> Ball joints and dust covers (UZJ100 models) .....	-	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	I
<input type="checkbox"/> Automatic transmission fluid .....	-	-	-	-	(I)	-	-	-	I(R)	-	-	-	(I)	-	-	-	R	-	-	-	-	(I)

<sup>5</sup> Lubricate within 24 hours after submerging in water.

I = inspect R = replace

L = lubricate T = tighten

(L or T) ... when driving under severe conditions

continued next page