

Toyota Maintenance Schedule

Maintenance Items	Kilometres x 1,000	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	85	90	95	100
	Months	-	3	6	9	12	15	18	21	24	27	30	33	36	39	42	45	48	51	54	57	60
Manual transmission oil		-	-	-	-	-	-	-	-	I (R)	-	-	-	-	-	-	-	I (R)	-	-	-	-
Transfer oil		-	-	-	-	-	-	-	-	I (R)	-	-	-	-	-	-	-	I (R)	-	-	-	-
Front differential oil		-	-	-	-	I (R)	-	-	-	R	-	-	-	I (R)	-	-	-	R	-	-	-	I (R)
Rear differential oil		-	-	-	-	I (R)	-	-	-	R	-	-	-	I (R)	-	-	-	R	-	-	-	I (R)
Wheel bearing and ball joint grease ^{6, 7}		-	-	-	-	R	-	-	-	R	-	-	-	R	-	-	-	R	-	-	-	R
Front and rear suspensions		I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I	-	(I)	-	I
Active height control suspension fluid (UZJ100 models)		-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	R
Active height control suspension gas chamber (UZJ100 models)		-	-	-	-	-	-	-	-	I	-	I	-	I	-	I	-	I	-	I	-	I
Chassis and body bolts and nuts		-	-	-	-	-	-	-	-	-	-	(T)	-	-	-	-	-	-	-	-	-	T
Tyres and inflation pressures		-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I
Lights, horns, wipers and washers		-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I
Air conditioner, including refrigerant level via sight glass		-	-	-	-	I	-	-	-	I	-	-	-	I	-	-	-	I	-	-	-	I
Road test																						
Road test vehicle		-	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I	-	I

⁶ Except rear wheel bearing grease on UZJ100 models which has maintenance free rear wheel bearings.

⁷ For UZJ100 models, lubricate the front drive shaft bearing and bush.

32 I = inspect R = replace (T) = tighten ... when driving under severe conditions